

控制類型	控制指令	功能描述
恢復出廠設置	EB 90 00 12 00 ff 21 00 00 00 00 00 00 00 00 00 00 00	恢復為 4 畫面,輸出解析度為 1080P
改輸出解析度	EB 90 00 12 00 ff 23 00 00 00 00 00 00 00 00 00 00 00	輸出解析度改為：1920x1080@60
	EB 90 00 12 00 ff 23 01 00 00 00 00 00 00 00 00 00 00	輸出解析度改為：1920x1080@50
	EB 90 00 12 00 ff 23 14 00 00 00 00 00 00 00 00 00 00	輸出解析度改為：1920x1080@30
	EB 90 00 12 00 ff 23 02 00 00 00 00 00 00 00 00 00 00	輸出解析度改為：1920x1200@60
	EB 90 00 12 00 ff 23 03 00 00 00 00 00 00 00 00 00 00	輸出解析度改為：1360x768@60
	EB 90 00 12 00 ff 23 04 00 00 00 00 00 00 00 00 00 00	輸出解析度改為：1280x720@60
	EB 90 00 12 00 ff 23 05 00 00 00 00 00 00 00 00 00 00	輸出解析度改為：1024x768@60
	EB 90 00 1200 ff 23 06 00 00 00 00 00 00 00 00 00 00	輸出解析度改為：2560x1600@60
	EB 90 00 12 00 ff 23 07 00 00 00 00 00 00 00 00 00 00	輸出解析度改為：2560x1600@50
	EB 90 00 12 00 ff 23 08 00 00 00 00 00 00 00 00 00 00	輸出解析度改為：3840x2160@60
	EB 90 00 12 00 ff 23 09 00 00 00 00 00 00 00 00 00 00	輸出解析度改為：3840x2160@50
	EB 90 00 12 00 ff 23 0A 00 00 00 00 00 00 00 00 00 00	輸出解析度改為：3840x2160@30
	EB 90 00 12 00 ff 23 0B 00 00 00 00 00 00 00 00 00 00	輸出解析度改為：3840x2160@25
	EB 90 00 12 00 ff 23 0C 00 00 00 00 00 00 00 00 00 00	輸出解析度改為：3840x2160@24
	EB 90 00 12 00 ff 23 0D 00 00 00 00 00 00 00 00 00 00	輸出解析度改為：4096x2160@60
	EB 90 00 12 00 ff 23 0E 00 00 00 00 00 00 00 00 00 00	輸出解析度改為：4096x2160@30
	EB 90 00 12 00 ff 23 11 00 00 00 00 00 00 00 00 00 00	輸出解析度改為：2560x1080@60
場景調用	EB 90 00 12 00 ff 2E 00 00 00 00 00 00 00 00 00 00 00	調用場景 1
	EB 90 00 12 00 ff 2E 01 00 00 00 00 00 00 00 00 00 00	調用場景 2
	EB 90 00 12 00 ff 2E 02 00 00 00 00 00 00 00 00 00 00	調用場景 3
	EB 90 00 12 00 ff 2E 03 00 00 00 00 00 00 00 00 00 00	調用場景 4
	EB 90 00 12 00 ff 2E 04 00 00 00 00 00 00 00 00 00 00	調用場景 5
	EB 90 00 12 00 ff 2E 05 00 00 00 00 00 00 00 00 00 00	調用場景 6
	EB 90 00 12 00 ff 2E 06 00 00 00 00 00 00 00 00 00 00	調用場景 7
	EB 90 00 12 00 ff 2E 07 00 00 00 00 00 00 00 00 00 00	調用場景 8
	EB 90 00 12 00 ff 2E 08 00 00 00 00 00 00 00 00 00 00	調用場景 9
	EB 90 00 12 00 ff 2E 09 00 00 00 00 00 00 00 00 00 00	調用場景 10
場景保存	EB 90 00 12 00 ff 2F 00 00 00 00 00 00 00 00 00 00 00	保存場景 1
	EB 90 00 12 00 ff 2F 01 00 00 00 00 00 00 00 00 00 00	保存場景 2
	EB 90 00 12 00 ff 2F 02 00 00 00 00 00 00 00 00 00 00	保存場景 3
	EB 90 00 12 00 ff 2F 03 00 00 00 00 00 00 00 00 00 00	保存場景 4
	EB 90 00 12 00 ff 2F 04 00 00 00 00 00 00 00 00 00 00	保存場景 5
	EB 90 00 12 00 ff 2F 05 00 00 00 00 00 00 00 00 00 00	保存場景 6
	EB 90 00 12 00 ff 2F 06 00 00 00 00 00 00 00 00 00 00	保存場景 7
	EB 90 00 12 00 ff 2F 07 00 00 00 00 00 00 00 00 00 00	保存場景 8
	EB 90 00 12 00 ff 2F 08 00 00 00 00 00 00 00 00 00 00	保存場景 9
	EB 90 00 12 00 ff 2F 09 00 00 00 00 00 00 00 00 00 00	保存場景 10
顯示模式調用	EB 90 00 12 00 ff 32 00 00 01 02 03 00 00 00 00 00 00	範本 1 單畫面
	EB 90 00 12 00 ff 32 01 00 01 02 03 00 00 00 00 00 00	範本 2 兩畫面 (左+右)
	EB 90 00 12 00 ff 32 02 00 01 02 03 00 00 00 00 00 00	範本 3 兩畫面 (畫中畫·左上)

	EB 90 00 12 00 ff 32 03 00 01 02 03 00 00 00 00 00 00	範本 4 兩畫面 (畫中畫・右下)
	EB 90 00 12 00 ff 32 04 00 01 02 03 00 00 00 00 00 00	範本 5 三畫面 (一上大帶二下小・二小縮放)
	EB 90 00 12 00 ff 32 05 00 01 02 03 00 00 00 00 00 00	範本 6 三畫面 (一上大帶二下小・二小原尺寸)
	EB 90 00 12 00 ff 32 06 00 01 02 03 00 00 00 00 00 00	範本 7 三畫面 (畫中畫・左下右下)
	EB 90 00 12 00 ff 32 07 00 01 02 03 00 00 00 00 00 00	範本 8 四畫面 (2X2 等比例)
窗口訊號切換 備註 1	EB 90 00 12 00 ff 31 00 01 02 03 00 00 00 00 00 00 00	Win1~4 分別對應輸入 1~4
	EB 90 00 12 00 ff 31 00 00 00 00 00 00 00 00 00 00 00	Win1~4 全部對應輸入 1
	EB 90 00 12 00 ff 31 01 01 01 01 00 00 00 00 00 00 00	Win1~4 全部對應輸入 2
	EB 90 00 12 00 ff 31 02 02 02 02 00 00 00 00 00 00 00	Win1~4 全部對應輸入 3
	EB 90 00 12 00 ff 31 03 03 03 03 00 00 00 00 00 00 00	Win1~4 全部對應輸入 4
多畫面音源通道 切換	EB 90 00 12 00 ff 30 00 00 00 00 00 00 00 00 00 00 00	切換音源通道 1
	EB 90 00 12 00 ff 30 01 00 00 00 00 00 00 00 00 00 00	切換音源通道 2
	EB 90 00 12 00 ff 30 02 00 00 00 00 00 00 00 00 00 00	切換音源通道 3
	EB 90 00 12 00 ff 30 03 00 00 00 00 00 00 00 00 00 00	切換音源通道 4